

HOTCHKIS

SPORT SUSPENSION

Sport Sway Bar Kit (22425)

Scion tC



Thank you for your purchase from our new line of Scion tC parts.

Please call us at (877) 4NO - ROLL if you have any questions regarding the service or installation of your Hotchkis products. Visit us online @ www.hotchkis.net

Tools required for this installation:

- Hydraulic jack, jack stands, torque wrench
- The following sockets or wrenches: 12mm, 14mm, 17mm, 19mm
- The following Allen wrenches: 6mm
- Suggested tools: 6" socket extension, swivel ratchet




STOP Please Read Before Continuing STOP



Hotchkis Tuning recommends that this sway bar set be installed by a professional, as the front sway bar can only be removed or installed by detaching the front engine cradle and lowering it from the vehicle! Please carefully review all steps of the installation instructions before attempting installation.

INSTALLATION OF HOTCHKIS FRONT SWAY BAR


- 1) Securely block the rear wheels of the vehicle. Use a jack to lift up the front of the vehicle and use jack stands to support it. Do not remove the front wheels during installation for safety.
- 2) Use a 14mm wrench and 6mm Allen wrench to remove the nuts holding the end links to the ends of the stock sway bar. Remove the end links from the ends of the sway bar. Retain the hard ware for later use.

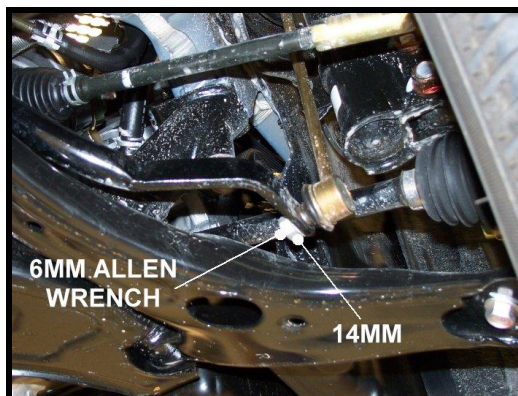


- 3) Use a 19mm Socket to remove the 2 nuts in the front and 8 bolts in the rear of the cradle.

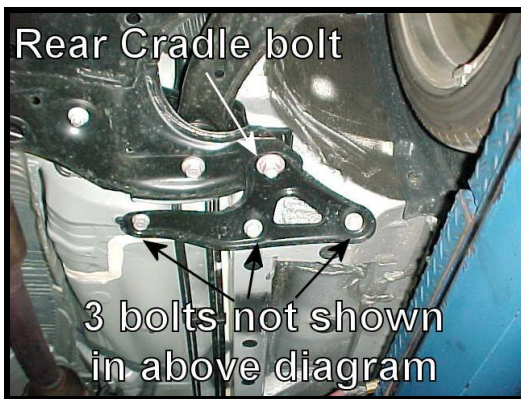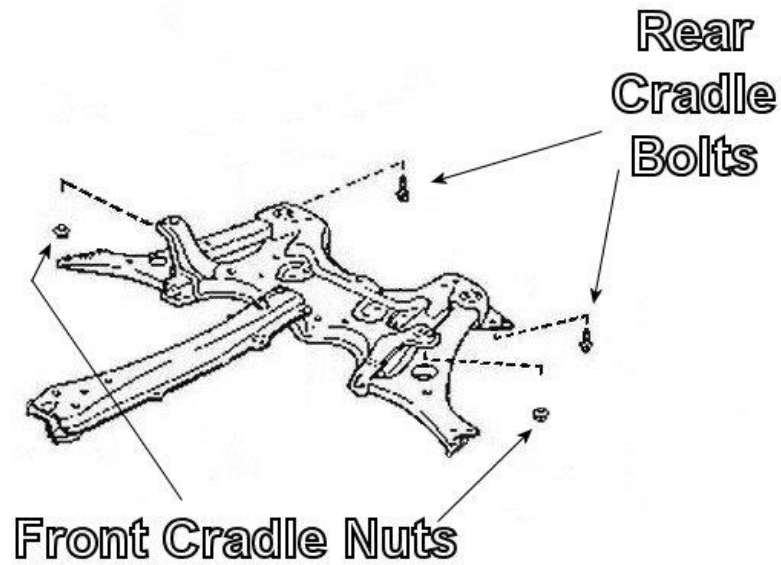


- 4) Use a 14mm Socket to remove the 3 Nuts and 2 Bolts that secure the lower engine mount to the cradle. Retain all hardware for re-installation.

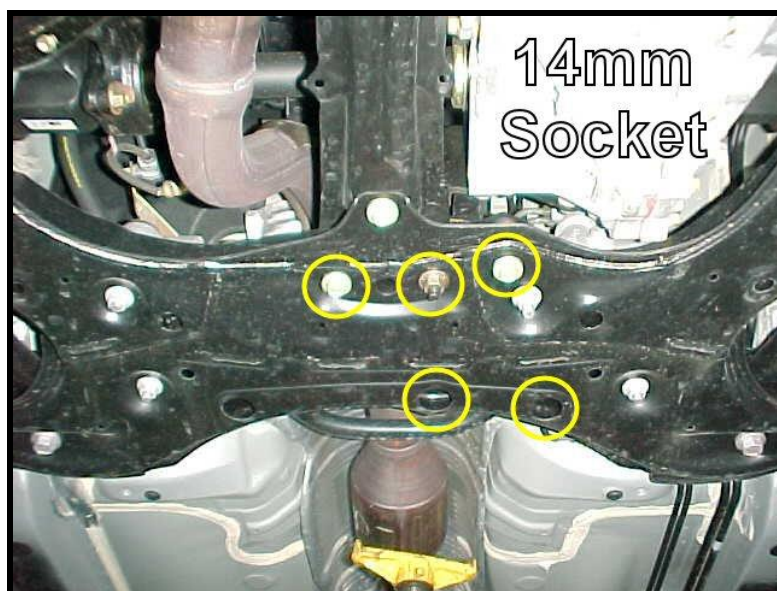


- 5) Remove the front splashguard by removing a series of plastic fasteners and bolts. Use a 10mm socket or screwdriver to remove the bolts. Use a flat head screwdriver to undue the plastic fasteners. Retain all hardware for re-installation.

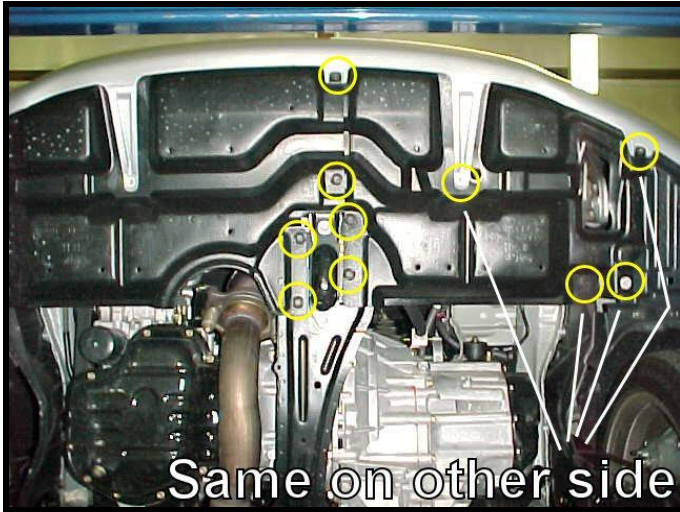

- 6) Next, remove the 2 bolts that secure the cradle bridge bracket to the radiator support.

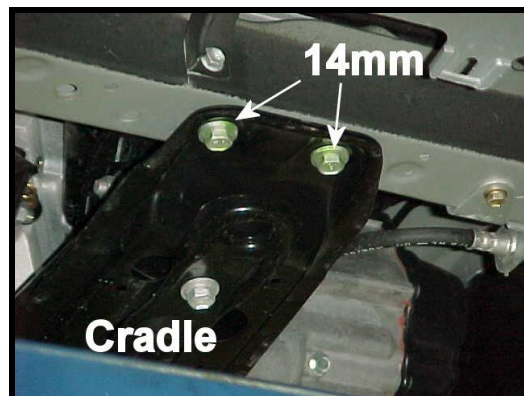


- 7) Remove the 4 nuts that secure the steering rack to the cradle. It's suggested that you use an impact wrench for easier removal.

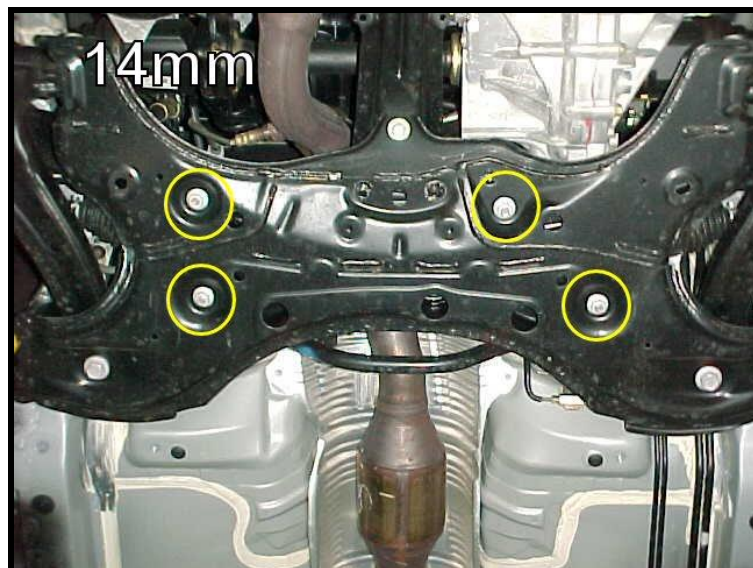

- 8) With all the nuts & bolts removed the cradle should droop loosely enough to reach the sway bar mounted to the top rear portion of the cradle. Use a 14mm socket or wrench to loosen and remove the four bolts holding the stock sway bar in place. Remove the stock sway bar, bushings and brackets. Retain the stock bolts for re-installation.




- 9) With the stock sway bar removed, set your new Hotchkis bar next to it for reference and orientation.

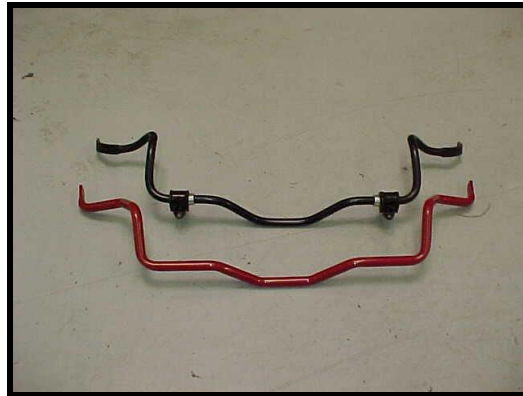

- 10) Re-install your new Hotchkis sway bar in the same manner as the stock sway bar removal. Install using the included Hotchkis polyurethane bushings and brackets. It's a good idea to install the bushings and brackets after the bar is in position. Lube the inside of each bushing with the provided grease. Use bushing prt # 5339.

Note: On the passenger side, make sure the sway bar is positioned inboard of the power steering hose shown in the picture below.

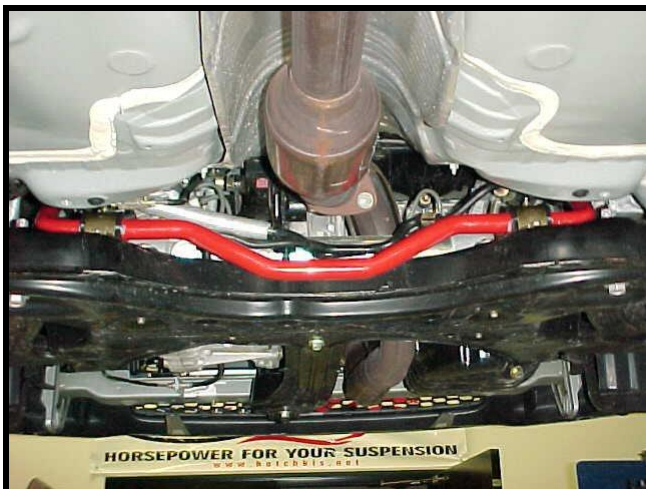




Use the provided flat cut washers with the OEM bolts

11) **Steps for reinstalling the cradle:**


1 – Install the 2 rear cradle bolts. It might be difficult to start the bolt in the hole due to misalignment, so you will need to line up the cradle hole with the frame hole. Once aligned the bolt should thread easily. Do not force thread the bolts! They may cross thread if you do! This step takes patience and may require you to use pry bars, picks, or tranny jacks to align the cradle correctly. Once properly threaded, torque this bolt to **116 ft-lbs**.




2 – Install the front cradle nuts and torque to **116 ft-lbs**.

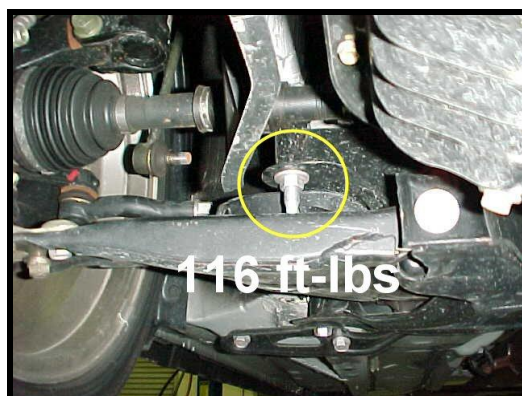


3 – Install the 2 bolts that secure the cradle bridge bracket to the radiator support. Torque to **29 ft-lbs**.

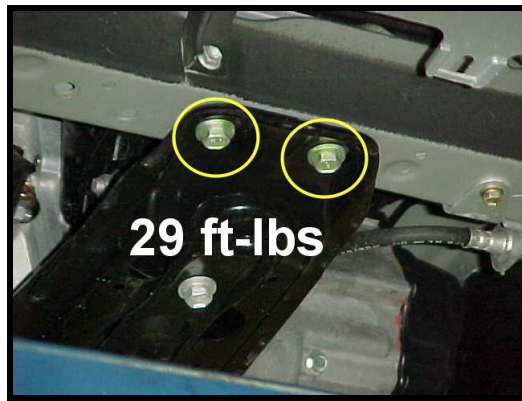

4 – Install the nuts & bolts to secure the lower engine mount to the cradle. Torque to **47 ft-lbs**.

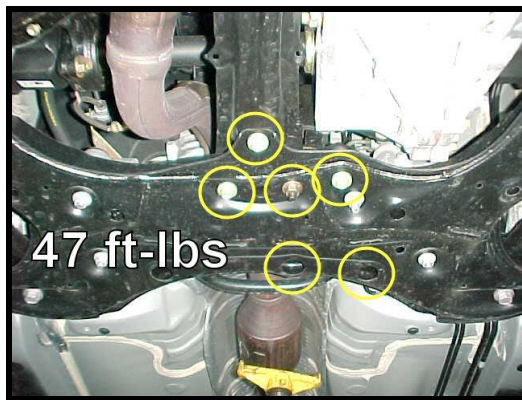


5 – Install the 4 nuts to secure the steering rack to the cradle. Torque to **45 ft-lbs**.

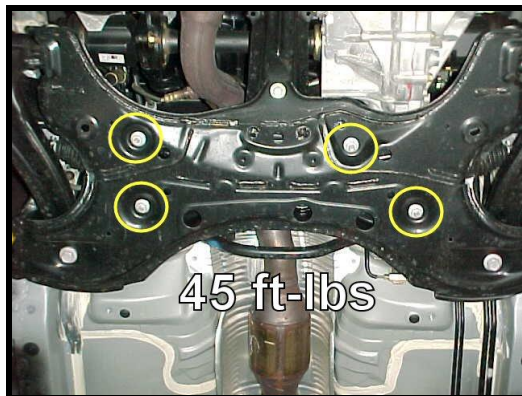

6 – Reinstall the front splashguard in the same manner as removal. This will conclude the cradle reinstallation procedure.

- 12) Once the cradle is reinstalled, attach the end links to the sway bar and torque the nuts to **32 ft-lbs**. For adjustable sway bar stiffness, refer to picture below.

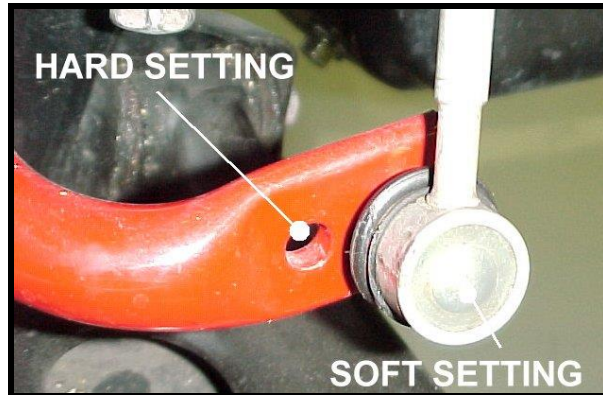

Important Note: Double check to make sure the power steering line is not in contact with the sway bar. If so, you can carefully bend the metal line away from the bar, which clearances the rubber hose from rubbing against the sway bar.

- 13) It's a good idea to also check the power steering boot clip clearance for each side. If the clips are pointing toward the sway bar than it may rub against it. Simply rotate the clip away from the sway bar to avoid any rubbing issues.




- 14) Re-check all hardware for tightness. Use a jack to remove the jack stands and you're ready to move on to the rear sway bar!




INSTALLATION OF HOTCHKIS REAR SWAY BAR

- 1) Securely block the front wheels of the vehicle. Use a jack to lift up the rear of the vehicle and support with jack stands. As with the front installation, you should not remove the rear wheels.
- 2) Remove the end link nuts that secure the sway bar to the end links using a 14mm wrench (and 6mm allen wrench if necessary). Retain this hardware for reinstallation.

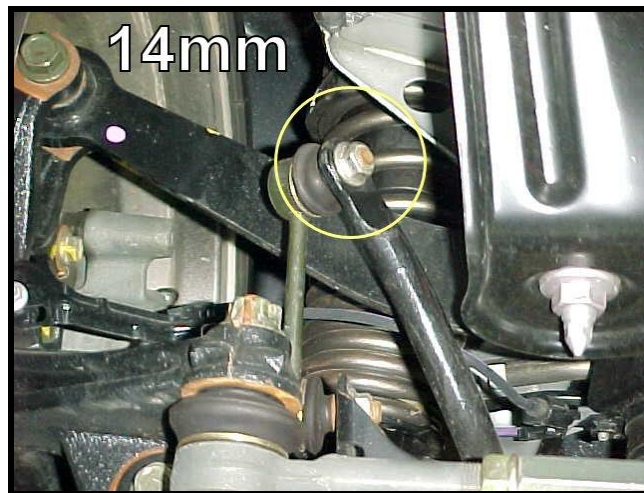

- 3) Remove the nut and bolt for each side subframe mount using a 14mm socket. You may discard this hardware.

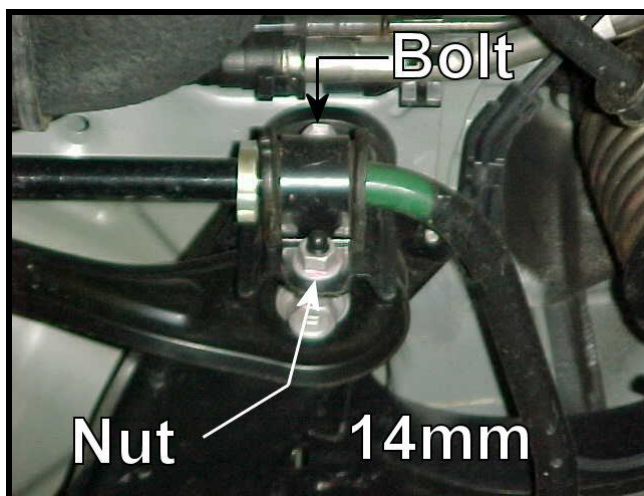


- 4) Remove the subframe bushing and bracket to ease the removal of the bar from the vehicle. You may discard the old bushing and bracket. Gently pull the sway bar towards the front of the car and the driver side end should be free to drop out.

- 5) With the stock sway bar removed, set your new Hotchkis bar next to it for reference and orientation.



- 6) Install your new Hotchkis sway bar in the same manner as the stock removal. Just to reiterate, the passenger side end of the bar will be fed up and over the exhaust pipe first. Then the bar can be positioned correctly.


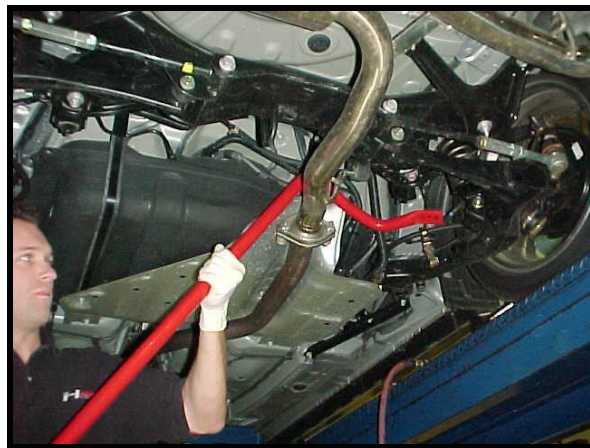


- 7) Lube the inside hole of your new Hotchkis polyurethane bushings and install the bushings on to the bar.



- 8) Place the provided bushing bracket over the bushing and set the sway bar into its proper position. Install the provided nut and bolt & flat cut washer to secure the bracket to the frame of the vehicle.

Note: Use Bushing prt # 5341

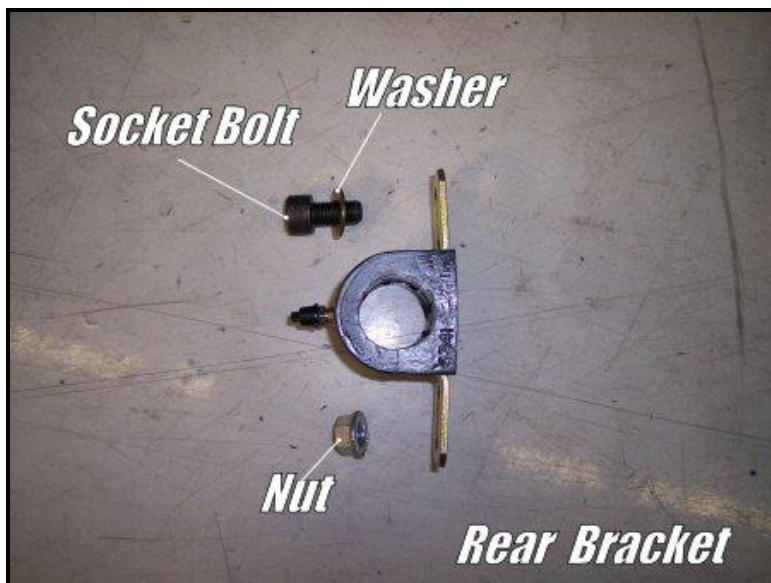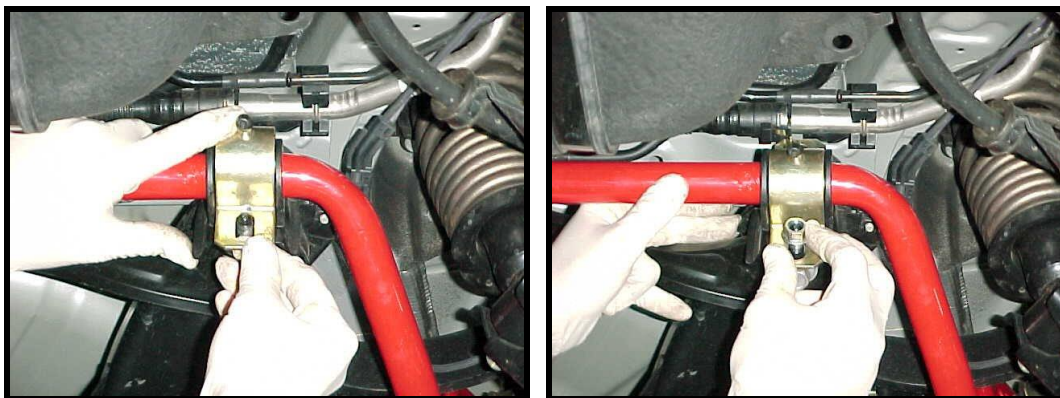

- 9) Lastly, secure the end links on to your new Hotchkis sway bar. Adjust your sway bar stiffness by selecting one of the 3 holes on the end of the bar. The hole closest to the end is the softest setting.



- 14) Re-check all hardware for tightness. Use a jack to remove the jack stands and you're finished! Enjoy your new Hotchkis sway bar kit!



Sport Sway Bar Kit Scion tC

	Hotchkis P/N	Item Description	Quantity
1	22820271	Front Anti Roll Bar, Scion tC	1
2	22920271	Rear Anti Roll Bar, Scion tC	1
3	5339G	Front Polyurethane Bushings	2
4	5341G	Rear Polyurethane Bushings	2
5	15.12.39.39	Front Bushing Brackets	2
6	15.12.06.39	Rear Bushing Brackets	2
7	M10-1.25x20SHCS	M10 - 1.25 x 20 bolt	2
8	M10FLANGENUT	M10 - 1.25 Flange Nut	2
9	3/8FLATWASH	3/8 SAE Flat Side Washer, G8	2
10	9.11108	Grease Pack	2
11	17490002	Flat Cut Washers	4



All information contained herein is subject to change without notice. BUYER'S ACCEPTANCE OF DELIVERY OF THE PRODUCT CONSTITUTES BUYER'S ACCEPTANCE OF THE TERMS HEREIN. ANY ADDITIONAL OR DIFFERENT TERMS PROPOSED BY THE BUYER ARE HEREBY REJECTED IN THEIR ENTIRETY UNLESS EXPRESSLY AGREED TO IN WRITING BY SELLER'S AUTHORIZED AGENT.

TERMS

Prepaid, Visa, MasterCard. Net 30 days from invoice date terms are available after credit approval. Accounts with invoices past due will be placed on "Credit Hold". A finance charge of 1.5% per month will also be applied to all past due invoices, not to exceed the maximum charge permitted by law. Accounts are considered paid in full upon Hotchkis Performance Inc.'s receipt of the full invoice amount plus collection fees and expenses incurred, if any. NSF checks stop payment checks, chargebacks on credit cards, etc. are charged a minimum of \$35 fee. No deduction or credit may be taken for any reason unless a credit memo has been issued by Hotchkis Performance Inc. Any unauthorized deduction will automatically put the account on credit hold. Other product special orders require a 50% down payment and are also non-cancelable and non-returnable.

DROP SHIPMENTS & REFUSED PACKAGES

Drop shipments are charged a \$30 service charge. A 20% restocking fee and all shipping costs are charged to the ordering party if a package is refused. No international drop shipments.

RETURNS

All returns are subject to prior authorization from Hotchkis Performance Inc. Once authorized, a Return Merchandise Authorization (R.M.A) will be issued. All authorized returns must have the R.M.A number on all cartons and shipping documents. Returned product must be shipped prepaid – collect shipments will be refused. Modified or used products are not eligible for return. Returns **MUST** be made within 90 days of invoice date and are subject to a **20% restocking fee. No returns are accepted after 90 days.** Freight charges are not refundable unless the merchandise is defective as determined by Hotchkis Performance Inc. Special orders are not returnable.

DAMAGED SHIPMENTS / SHORTAGES

All Hotchkis Performance Inc.'s shipments are F.O.B. our factory. Title passes from Hotchkis Performance Inc. to the purchaser at the time is shipment initiated. Claims for Carton shortages and damages must be made against the carrier at the time of delivery. To expedite processing of claims against the carrier, the customer must note damages on the bill of lading at the time of the delivery, and promptly request an inspection by the carrier or its claims agent. If a shortage is found within the shipment, it must be reported to Hotchkis Performance Inc. in writing within five (5) business days of receipt of shipment. Claims need to include the following information order number, invoice number, date of invoice, date of shipment, part number, description and carton count.

PRODUCT SUBSTITUTION / OTHER

Hotchkis Performance Inc. reserves the right to substitute equal or better materials or products at its discretion. Hotchkis Performance Inc. reserves the right to change specifications and other information included in this catalog without notice. All information, data and dimension tables in this catalog have been carefully compiled and thoroughly checked. However, no responsibility for errors or omissions can be assumed. Some parts may not be legal for sale or use in certain states, including California, on certain pollution-controlled motor vehicles. It is the purchaser's responsibility to determine if any parts they purchase are suitable for their particular locale and use.

WARRANTY / DISCLAIMER

Hotchkis Performance Inc. warrants that the products will be free from defect in material and workmanship for three years from date of sale to the original purchaser. Hotchkis Performance Inc. makes no other warranty of any kind, express or implied. Hotchkis Performance Inc. shall have no obligation under the forgoing warranty where the defect is the result of improper or abnormal use, user's negligence, vehicle accident, improper or incorrect installation or maintenance, nor when the product has been repaired or altered in any way. Hotchkis Performance Inc.'s liability in the case of defective products subject to the forgoing warranty shall be limited solely to the repair or replacement, at Hotchkis Performance Inc.'s option, of the defective products. Hotchkis Performance Inc. will be the sole judge of the validity of warranty claims.

Consequential or incidental damages are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

In order to be eligible for service under this warranty, the defective part(s) must be returned to Hotchkis Performance Inc. by the original purchaser together with the R.M.A number issued from Hotchkis Performance Inc. and a copy of the receipt showing purchase within past 3 years. Tag each item with the part number and the specific explanation of defect. We will inspect the part and determine: a) if it is eligible for repair or replacement; and, b) if so, whether to repair or replace it. All returns must be shipped **prepaid** to:

Hotchkis Performance Inc.
RMA # _____
118 Infield Court
Mooresville, NC 28117

Hotchkis Performance Inc. will return all products covered under warranty to you by ground freight at Hotchkis Performance Inc.'s expense. Any expedited freight is the responsibility of the customer.

THE BUYER UNDERSTANDS AND EXPRESSLY RECOGNIZES that ALL parts and services sold by Hotchkis Performance Inc. are exposed to many and varied conditions due to the manner in which they are installed and used. BUYER ACKNOWLEDGES that HOTCHKIS PERFORMANCE INC. does not have full knowledge of the intended use of goods, and BUYER WILL DEFEND AND INDEMNIFY HOTCHKIS PERFORMANCE INC. upon demand against all claims, actions, liability, loss and expense (including investigating expense and attorney fees incurred in litigation or because of threatened litigation) for any loss, damage or injury, either to a person or to property, resulting from the direct or indirect use of any Hotchkis Performance Inc. products or inability by the buyer to determine proper use or application of Hotchkis Performance Inc. products. With the exception of the limited liability warranty set forth above. Hotchkis Performance Inc. SHALL NOT BE LIABLE FOR ANY CLAIMS, DEMANDS, INJURIES, DAMAGES, ACTIONS, OR CAUSES OF ACTION WHATSOEVER TO BUYER ARISING OUT OF OR CONNECTED WITH THE USE OF ANY HOTCHKIS PERFORMANCE INC. PRODUCTS

MOTORSPORTS AND SIMILAR ACTIVITIES ARE DANGEROUS; AS SUCH, NO WARRANTY OR REPRESENTATION IS MADE AS TO THE PRODUCT'S ABILITY TO PROTECT THE USER FROM INJURY OR DEATH. THE USER ASSUMES THAT RISK